


说明书



MIRO
Kids Smartwatch W1 SE
User Manual

Fox Development Inc.
3480 Preston Ridge Rd Suite500, Alpharetta, GA 30005

1. What's in the box

Kids Watch	Charging Cable	User Manual	Card Picker	FCC Statement	Important Notes Booklet
1	1	1	1	1	1

2. Activate your watch in 3 steps

1. Activate your SIM
2. Install the Trackino App on your phone
3. Connect your watch with Trackino App

3. Kids Watch Phone display

Front side: Speaker, Camera, Air vent, SIM card slot, Mic, Power key, Charging connector

Back side: Camera, Air vent, Charging connector


Reminder: Do not poke the mic and air vent with sharp objects such as card removal pins.

4. Choosing correct SIM card

Operator: Choosing operator who supports 2G/3G/4G network
SIM card type: Nano SIM card only
Data packet: Before you use the watch, please make sure the SIM card is active and able to use 2G/3G/4G data.

Normal SIM, Micro SIM, Nano SIM


5. Disassemble and assemble the case

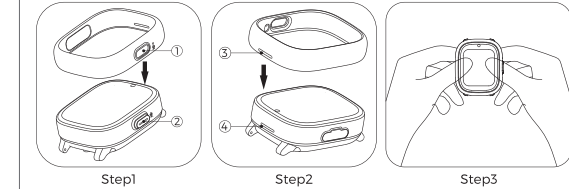

Steps to install the case:
1. Align the ① hole at the right side of the case with the button at the body at the ② position.
2. Align the ③ hole at the top of the case with the speaker hole at the ④ position.
3. Put the case down and cover the body until it is tight.

6. SIM card installation

Please read carefully before turn on watch to avoid any abnormal caused by wrong card installation.

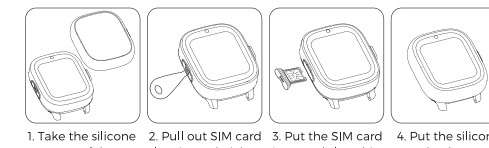


Steps to install the case:
1. Take the silicone case out of the watch.
2. Pull out SIM card slot via card picker.
3. Put the SIM card into card slot, chip side up, and insert the watch.
4. Put the silicone case back on the watch.


Note: For new SIM card, do not install the SIM card until activation is done. When installing the silicone case, please align the speaker hole.

7. Download "Trackino" App

Download Trackino App through followed methods:
1. Scan QR code to download the App.
2. Search "Trackino" App name in Apple App Store or Google Play Store.




8. Register & Login "Trackino" App

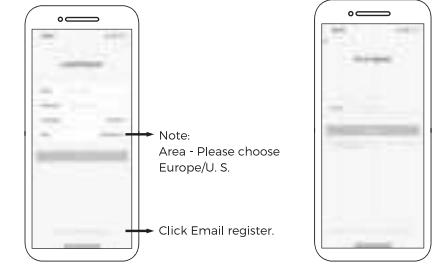

Note: Area - Please choose Europe/US


9. Scan QR code and bind watch

1. Turn on App and login.
2. Turn to bind watch interface, tap "Bind" and scan QR code to bind watch.

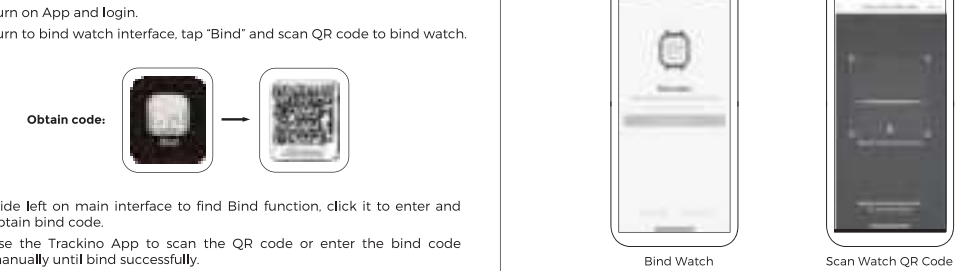

10. Function button operation

Function Button
1. Long press to turn on (if watch can't turn on, please confirm whether watch is out of power)
2. Short press to turn off/on screen
3. One-tap SOS
Long press for Ss to send emergency call (need to set emergency contact person in App)
Reminder: If the new watch cannot be turned on, it is likely that the watch is out of power. Please plug in the charging cable until the watch shows the charging interface.

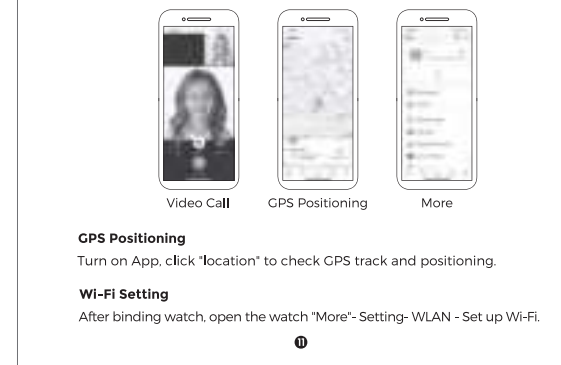

Video Call
Turn on App, click "location" to check GPS track and positioning.


GPS Positioning
Turn on App, click "location" to check GPS track and positioning.

Wi-Fi Setting
After binding watch, open the watch "More"-Setting-WLAN - Set up Wi-Fi.

11. Basic operation

Slide down on main interface to enter message notification

Slide left on main interface to enter Phone/Chat/Video call/Add Friend/No call/Message/Bind/Steps/Camera/Gallery/Settings.

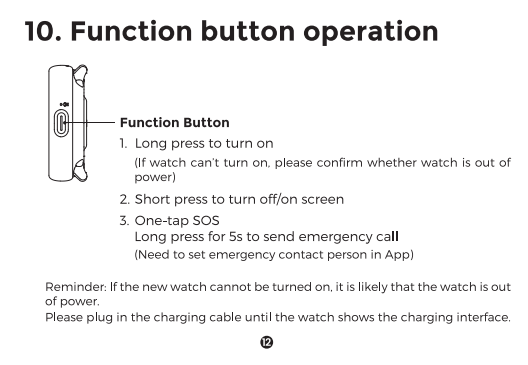

12. Basic function

Phone
Click "Phone". Select contact to make a phone call. If can't make a call, please check whether contact is added on App.

Chat
Click "Chat". On "Chat" page, press and hold "HOLD" to record voice, and then release to send voice.
Click the unread message on the screen to play voice message.

Video call
Click "Video call". Select contact and select Video Since two-way voice call will use data, you may connect Wi-Fi for voice call.
Reminder: Long video calls will cause the watch to heat up. Please do not wear the watch when the high temperature alarm pops up. Wear the watch after the temperature drops to avoid high temperature scald.

Add Friends
Make sure both watches have SIM cards inserted and connected to Trackino apps. Open "Add Friend" on both watches, click "Add friend", then click "Start to make friends", then "Search for friends". Once the names of other watches are shown on the screens, the watches are added each other as friends. You can exchange messages, make voice calls or video calls among friends. You can only add friends among the same brand and same model kids watches.

No call
Click "No call". Select contact and select voice chat. Since two-way voice call will use data, you may connect Wi-Fi for voice call.
Reminder: Long voice calls will cause the watch to heat up. Please do not wear the watch when the high temperature alarm pops up. Wear the watch after the temperature drops to avoid high temperature scald.

Message
Click "Message". You can view the text message content, you can click "Message" icon quick reply.

Steps
Click "Steps", you can view the number of daily steps.


Camera
Click "Camera" to start to take pictures. You can view and delete photos in gallery.

Gallery
Click "Gallery". You can view and delete photos in "Gallery".

Settings
Click "Settings". You can set the Device Settings. (Alarm, Gallery, stopwatch, Message, Display, Language, Brightness, Sound, Clock, Background, Clear cache, About, etc.)

13. Charging

Please align charging contacts of the watch with metallic contacts on the charging cable until charging power indicator appears on watch screen.

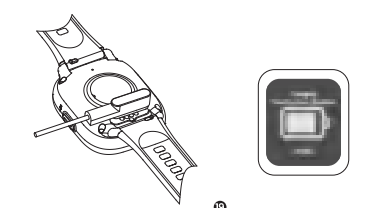

14. Specifications

	Specifications
Size	51.2 x 42.8 x 15.5mm
Color	Blue/Black/Purple
Display	1.71inch 240x280 pixels
Memory	RAM:64MB ROM:128MB
Sensor	Accelerometer
Positioning	GPS/WiFi/LBS/A-GPS Accelerometer positioning
Battery	770mAh
Camera	0.3MP
System	RTOS

MIRO is constantly improving and perfecting the functions of our products. If the contents in this manual are slightly different from the actual functions, specifications or designs of the products, we will not be able to notify you separately. Therefore, any claims based on the data, diagrams or text descriptions in this manual will not be accepted.

Please read this manual carefully before using the product and keep it for future use. The pictures in this manual are used to guide user operation and are for reference only.

Please refer to the actual product for details.

注意事项

Important Notes Booklet

1. Product statement

- Please read the contents of this manual carefully to ensure that you can use this product correctly and safely.
- Please use the matching strap for this product to prevent some straps from affecting the antenna signal of the watch, resulting in unclear calls and inability to locate and other problems.
- This product has positioning functions. Before the watch is bound, these functions are turned off. After you bind the watch, you can position the watch.
- The outdoor GPS positioning of this product may not be able to locate due to the lack of satellite signals in bad weather conditions.

- This product must use original accessories. If you use this product to connect incompatible accessories, this behavior may cause irreparable damage to the product, and even endanger the safety of you and your children. In this regard, the company does not assume any responsibility.
- This product can only function normally when the network is unobstructed. The company does not assume any responsibility for any loss caused by service interruption due to network failure or any other force majeure.
- Based on the principle of continuous improvement, continuous optimization of products, and improvement of user experience, the company reserves the right to modify and improve any product functions described in the document without prior notice. The

- content in this manual is provided in the condition in which the product is manufactured and, except as otherwise required by applicable law, no warranty of any kind, express or implied, is made as to the accuracy, reliability and content of the document.
- Some functions of this product are provided by third parties.
- This manual contains important information, please keep it for future use.

2. Precautions

Precautions for places of use and operating environment

- Any radio transmitting equipment (including this product) may cause interference to the function of improperly protected medical equipment. Where the use of wireless transmission functions of electronic equipment is prohibited, regulations must be followed.
- Pacemakers, implanted cardioverter defibrillators: When turning on

- the watch, always keep the distance between the watch and the device more than 6 inches (about 15.5 cm). Do not put the watch in your coat pocket. Please use the watch on the other side of the instrument to reduce potential interference. If you suspect interference, turn off your watch immediately.
- Hearing Aids, Cochlear Implants: Certain digital wireless devices may cause interference with certain hearing aids or cochlear implants. If such interference occurs, please contact the manufacturer for a solution.
- Other medical equipment: If you and the people around you are using other medical equipment, please consult the manufacturers of these equipment to ensure that they can adequately shield the surrounding radio frequency signals. You can also ask your doctor for information.

- Do not put the watch, charger (cable) in and around heating equipment or high-voltage equipment (such as microwave ovens, ovens, radiators, electric heaters, etc.) otherwise it may cause accidents such as circuit damage, fire and explosion.
- Do not use this product in thunderstorm weather.
- Do not subject this product and accessories to strong impact or vibration, so as not to damage the product.
- Do not use the watch speaker close to the ear, as it may cause hearing damage due to excessive volume.
- If you need to replace watch parts (such as straps, lugs, buckles, etc.), please be operated by an adult. Children are strictly prohibited from touching the parts, so as to prevent children from swallowing small

- parts and causing suffocation or other dangerous situations.
- Please use the parts correctly according to the instructions, and do not use them for other purposes.
- When using applications that consume a lot of power or using certain applications on the device for a long time, if you touch the device and feel warm, this is normal and will not affect the performance or lifespan of the device. If the device feels warmer, remove it until it cools down. Prolonged skin contact with equipment that is too hot may cause low-temperature burns and red spots and pigmentation will appear on the skin at the contact site.
- In order to prolong the service life of the battery, please keep the battery fully charged. If the charged battery is left unused for a long time, the battery will gradually discharge by itself. When not in use,

- other accessories by themselves. When the watch and accessories malfunction, please contact your local after-sales service center.
- Do not use chemical solvents or detergents to clean this product.
- Please avoid dropping, knocking or vibrating the watch. Rough handling of the watch will cause the screen to break and damage the internal circuit board and precision structure.
- In case of abnormal phenomena during use, please press and hold the power button until the watch is turned on, which can solve general faults.
- In order to prolong the service life of the battery, please keep the battery fully charged. If the charged battery is left unused for a long time, the battery will gradually discharge by itself. When not in use,

please place the watch in a cool, dry and dark place after charging.

- The cleanliness of the strap is not a constant feature, and the cleanliness is related to the user's usage environment and habits. It is in direct contact with the skin when worn and should be kept clean. When the strap is stained with sweat, dust, etc., please wipe it with a clean, dry soft cloth.
- If the charging contacts are dirty, please use a soft dry cloth to clean them, and do not scratch them with hard metal objects.
- When the watch strap is old and cracked, it must be replaced with a new one.
- Before cleaning the watch, please turn off the watch.

- Do not clean the watch while charging.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- If the watch has abnormal phenomena such as overheating, discoloration, deformation, bulging, and liquid leakage during use, charging or storage, please stop using it to avoid safety problems.
- Please do not put discarded batteries together with household garbage. In areas where there are corresponding regulations on the disposal of used batteries, please follow the relevant regulations of the local customer service department.
- When charging, because the temperature of the battery will rise, please do not put the watch together with flammable objects (such as bedding, clothing, books, so as not to cause a fire.)

- bursting, or fire.
- There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- If the watch has abnormal phenomena such as overheating, discoloration, deformation, bulging, and liquid leakage during use, charging or storage, please stop using it to avoid safety problems.
- Please do not put discarded batteries together with household garbage. In areas where there are corresponding regulations on the disposal of used batteries, please follow the relevant regulations of the local customer service department.
- When charging, because the temperature of the battery will rise, please do not put the watch together with flammable objects (such as bedding, clothing, books, so as not to cause a fire.)

- watch under the guidance of parents or other guardians.
- Precautions for using SIM card and charging cable**
- When loading/removing the SIM or connecting the charging cable to the charging contact, make sure that the insertion side of the card or the connection side of the charging cable is correct. Do not forcefully insert the SIM card or connect the charging cable.
- Do not take out the SIM card when transmitting or accessing information on the front of the watch, otherwise it may cause data loss and damage the SIM card.
- It is recommended to charge at a temperature above 5°C/41°F and below 35°C/95°F to avoid battery performance degradation.
- When the watch is working, it will actively connect to the data network and synchronize to the server intermittently.
- To reduce the risk of electric shock to children, please charge the

- Please enable the caller ID function of the SIM card. The watch will consume a certain amount of traffic during normal use and enjoy the upgrade service. Please make sure that the SIM card has call charges and traffic before using it. Please refer to the operator's charging standard for the call fee and traffic fee generated by using the SIM card.
- Wearing Instructions**
- When wearing the watch, please adjust the tightness of the strap. It should not be too tight to allow the skin to breathe; it should not be too loose to prevent the watch from falling off or being damaged.
- Please try to avoid flushing the watch or wearing the watch in the shower, otherwise the watch may be damaged.


- If the sound becomes weaker after the watch is soaked in water, please throw the water out of the speaker hole, and the sound will return to normal.
- People prone to skin allergies**
- Some people are susceptible to allergies and may feel uncomfortable when using wearable devices. Please pay special attention when wearing a watch.
- If you feel uncomfortable, it may be caused by wearing it too tight for too long. It is recommended that you adjust the tightness of the strap properly, or wear it with another hand for observation.
- If the skin around or in contact with the watch becomes red, swollen, itchy, or has other symptoms of discomfort, stop using it immediately and consult a doctor.
- If you need to replace the watch strap, please go to the regular retail outlet to buy it.
- Discomfort may also be re-induced or increased if continued use after symptoms disappear.
- The company does not assume any responsibility for discomfort caused by personal physical reasons.
- Description of waterproof performance**
- The water resistance level of the watch reaches IPX8. Cannot be used for bathing, swimming, diving, water skiing and high-speed water flow, or submerged in shallow water.

- Water resistance is not a permanent condition and may decrease over time. To ensure proper use of your watch, please follow these tips: Do not wear your watch while swimming, showering, sauna, sweating or in a steam room) and soaking in hot springs, etc.
- Avoid subjecting the watch to sudden temperature changes (such as blowing the watch with hot air from a hair dryer).
- Avoid operating or removing the SIM card when the water is still wet.
- Avoid contact with high-speed running water, such as faucets, rafting, surfing and water skiing.
- Avoid dropping or subjecting the watch to shocks, as the water resistance of the device may be impaired.

- Avoid contact with solvents (white wine, medical alcohol, etc.), acidic substances, detergents, soapy water, perfume, spray insecticide, lotion, sunscreen, oil, hair dye or bubble water, etc.
- Wipe off the product in time when sweat adheres to it for a long time.
- Avoid submerging the water meter in water for a long time. If the watch comes into contact with water, wipe it thoroughly with a clean soft cloth.
- After the watch comes into contact with water (such as washing hands), it is necessary to drain the accumulated water in the speaker and microphone holes, or use it after drying thoroughly to avoid affecting the sound.
- Precautions for video calls and camera use**

- It is recommended to use video calls in the WIFI state and in an environment with a relatively stable signal.
- When the watch is using functions such as video calls, the high-speed operation of the processor will generate a lot of heat. When the temperature of the watch rises to the preset threshold, the protection function will be automatically activated and the function will be exited.
- Personal Information Security**
- Please use this product with the consent of the wearer. To keep your kids safe, it's important to keep your product safe from unauthorized persons.

说明书




Manual del usuario del Smartwatch W1 SE para niños

Desarrollo de Foxx Inc.
3480 Ston Ridge Rd Suite500, Alpharetta, GA 30005

1. Qué hay en la caja

Reloj para niños	Cable de carga	Manual de usuario	Selector de cartas	Declaración de la FCC	Folleto de notas importantes
1	1	1	1	1	1



2. Activa tu reloj en 3 pasos

- Activa tu SIM
- Instala la aplicación Trackino en tu teléfono
- Conecta tu reloj con la aplicación Trackino

3. Pantalla del teléfono Kids Watch

Parte delantera: Orador, Cámara, Ranura para tarjetas SIM

Reverso: Salida de aire, Mic, Teclá de encendido, Conector de carga


Recordatorio: No pinche el micrófono y la salida de aire con objetos afilados, como pasadores de extracción de tarjetas.

4. Elegir la tarjeta SIM correcta


Operador: Elegir un operador que admita la red 2G/3G/4G

Tipo de tarjeta SIM: Solo tarjeta Nano SIM

Paquete de datos: antes de usar el reloj, asegúrese de que la tarjeta SIM esté activa y puede usar datos 2G/3G/4G



5. Desmontar y montar la caja

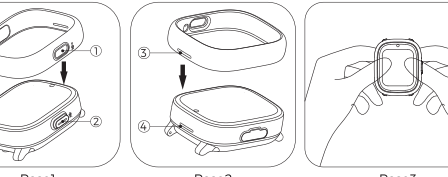


Paso 1: Alinee el orificio ① en la parte superior de la caja con el botón en el cuerpo en la posición ②.

Paso 2: Alinee el orificio ③ en la parte superior de la caja con el orificio del altavoz en la posición ④.

Paso 3: Deje el estuche y cubra el cuerpo hasta que quede apretado.

6. Instalación de la tarjeta SIM

Lea atentamente antes de encender el reloj para evitar cualquier anomalía causada por una instalación incorrecta de la tarjeta.



Paso 1: Saque la funda de silicona del reloj.

Paso 2: Sacar la ranura de la tarjeta SIM a través del selector de tarjetas.

Paso 3: Coloque la tarjeta SIM en la ranura para tarjetas, coloque el chip boca arriba e insértelo para ver la activación.


Paso 4: Vuelva a colocar la funda de silicona en el reloj.

Nota: Para una nueva tarjeta SIM, no la instale hasta que se realice la activación. Al instalar la funda de silicona, alinee el orificio del altavoz.


7. Descarga la aplicación "Trackino"

Descarga la aplicación Trackino a través de los siguientes métodos:

- Escanee el código QR para descargar la aplicación
- Busque el nombre de la aplicación "Trackino" en Apple App Store o Google Play Store

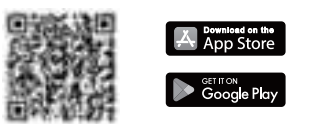

8. Regístrese e inicie sesión en la aplicación "Trackino"

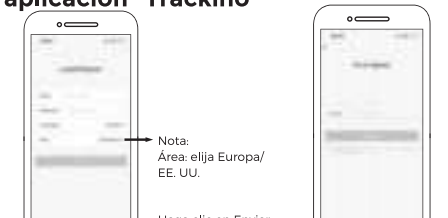


Regístrese con correo electrónico

Ingrese el correo electrónico


9. Escanee el código QR y encuaderne el reloj


- Encienda la aplicación e inicie sesión.
- Vaya a la interfaz del reloj de enlace: toque "Bind" y escanee el código QR para vincular el reloj.



Obtener código:

- Deslice el dedo hacia la izquierda en la interfaz principal para encontrar la función Bind. Haga clic en ella para ingresar y obtener el código de enlace.
- Utilice la aplicación Trackino para escanear el código QR o ingrese el código de enlace manualmente hasta que se vincule correctamente.





Posicionamiento GPS

Encienda la aplicación, haga clic en "ubicación" para verificar la pista y el posicionamiento del GPS.

Configuración de Wi-Fi

Después de vincular el reloj, ábralo, ve a "Más" - Configuración - WLAN - Configuración Wi-Fi.

10. Operación del botón de función

Botón de función

- Mantenga presionado para encender (Si el reloj no se puede encender, confirme si el reloj no tiene energía)
- Pulsación corta para apagar/encender la pantalla
- SOS con un toque


Mantenga presionado durante 5 segundos para enviar una llamada de emergencia (Necesidad de configurar la persona de contacto de emergencia en la aplicación)

Recordatorio: Si no se puede encender el nuevo reloj, es probable que el reloj no tenga energía. Conecte el cable de carga hasta que el reloj muestre la interfaz de carga.

11. Funcionamiento básico

Deslice hacia abajo en la interfaz principal para ingresar la notificación de mensajes

Deslice hacia la izquierda en la interfaz principal para ingresar a 'Teléfono', Chat/Videollamada/Agregar amigo/ Llamada No/Mensaje/Enlace/Posos/ cámara/Galería/Configuración



12. Función básica

Teléfono

Haga clic en "Teléfono", seleccione contacto para hacer una llamada telefónica; si no puede hacer una llamada, verifique si el contacto está agregado en la aplicación.

Charlar

Haga clic en "Chat", en la página "Chat", mantenga presionado "HOLD" para grabar la voz y luego suéltelo para enviar voz.

Haga clic en el mensaje no leído en la pantalla para reproducir el mensaje de voz.

Videollamada

Haga clic en "Videollamada": selección contacto y selección Video Dado que la videollamada bidireccional usará datos, usted puede conectar Wi-Fi para videollamadas. Recordatorio: Las videollamadas largas hacen que el reloj se caliente. Por favor, no haga videollamadas de más de 4 minutos. No use el reloj cuando aparezca la alarma de alta temperatura. Use el reloj después de que baje la temperatura para evitar quemaduras a altas temperaturas.

Agregar amigos

Asegúrate de que ambos relojes tengan tarjetas SIM insertadas y conectadas a las aplicaciones del Trackino. Abra "Añadir amigo" en ambos relojes, haz clic en "Añadir amigo" luego haz clic en "Empazar a hacer amigos" luego en "Buscar amigos". Una vez que los nombres de otros relojes se muestran en las pantallas, los relojes se agregan entre sí como amigos. Puede intercambiar mensajes, hacer llamadas de voz o videollamadas entre amigos. Solo puede agregar amigos entre la misma marca y el mismo modelo de relojes para niños.

Llamada Nio

Haga clic en "Llamada Nio", seleccione contacto y selección chat de voz. Dado que la llamada de voz bidireccional usará datos, puede conectarse a Wi-Fi para llamadas de voz. Recordatorio: las llamadas de voz largas harán que el watch se caliente. No use el reloj cuando aparezca la alarma de alta temperatura. Use el reloj después de que baje la temperatura para evitar quemaduras a altas temperaturas.

Mensaje

Haga clic en "Mensaje" para ver el contenido del mensaje de texto, puede hacer clic en el ícono "Mensaje" para responder rápidamente.

Pasos

Haga clic en "pasos", puede ver el número de pasos diarios.

Cámara

Haga clic en "Cámara" para comenzar a tomar fotografías. Puede ver y eliminar fotos en la galería.

Galería


Haga clic en "Galería", puede ver y eliminar fotos en "Galería".

Configuración

Haga clic en "Configuración", puede configurar la configuración del dispositivo. (Idioma, Galería, cronómetro, Mensaje, Pantalla, Idioma, Brillo, Sonido, Reloj, Luz de fondo, Barrar, caché, Acerca de, etc.)

13. Carga

Alinee los contactos de carga del reloj con los contactos metálicos del cable de carga hasta que aparezca el indicador de potencia de carga en la pantalla del reloj.

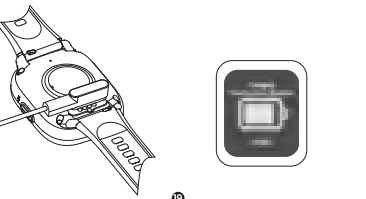

14. Especificaciones

Características técnicas	
Tamaño	51,2 x 42,8 x 15,5mm
Color	Azul/Negro/Morado
Pantalla	1,7" pulgadas 240x280 píxeles
Memoria	RAM:64MB ROM:128MB
Sensor	Accelerómetro
Posicionamiento	GPS/WiFi/LBS/A-GPS Posicionamiento del acelerómetro
Batería	770mAh
Cámara	0.3MP
Sistema	RTOS

MiRO mejora y perfecciona constantemente las funciones de nuestros productos. Si el contenido de este manual es ligeramente diferente de las funciones, especificaciones o diseños reales de los productos, no podemos notificar por separado. Por lo tanto, no se aceptarán afirmaciones basadas en los datos, diagramas o descripciones de texto de este manual.

Lea atentamente este manual antes de usar el producto y guárdelo para usarlo en el futuro. Las imágenes de este manual se utilizan para guiar la operación del usuario y son solo de referencia.

Consulte el producto real para obtener más detalles.

MiRO mejora y perfecciona constantemente las funciones de nuestros productos. Si el contenido de este manual es ligeramente diferente de las funciones, especificaciones o diseños reales de los productos, no podemos notificar por separado. Por lo tanto, no se aceptarán afirmaciones basadas en los datos, diagramas o descripciones de texto de este manual.

Lea atentamente este manual antes de usar el producto y guárdelo para usarlo en el futuro. Las imágenes de este manual se utilizan para guiar la operación del usuario y son solo de referencia.

Consulte el producto real para obtener más detalles.

Folleto de Notas Importantes

1. Declaración de producto

Lea atentamente el contenido de este manual para asegurarse de que puede utilizar este producto de forma correcta y segura.

Utilice la correa correspondiente para este producto para evitar que algunas correas afecten la señal de la antena del reloj, lo que provocará llamadas poco claras e incapacidad para localizar y otros problemas.

Este producto tiene funciones de posicionamiento. Antes de que se vincule el reloj, estas funciones se desactivan. Después de vincular el reloj, puede colocarlo.

Es posible que el posicionamiento GPS exterior de este producto no pueda ubicarse debido a la falta de señales satelitales en condiciones climáticas adversas.

Este producto debe utilizar accesorios originales. Si utiliza este producto para conectar accesorios incompatibles, este comportamiento puede causar daños irreparables al producto e incluso poner en peligro su seguridad y la de sus hijos. En este sentido, la empresa no asume ninguna responsabilidad.

Este producto solo puede funcionar normalmente cuando la red no está obstruida. La empresa no asume ninguna responsabilidad por cualquier pérdida causada por la interrupción del servicio debido a un fallo de la red o cualquier otro caso de fuerza mayor.

Basado en el principio de mejora continua, optimización continua de productos y mejora de la experiencia del usuario, la empresa se reserva el derecho de modificar y mejorar cualquier función del producto descrita en el documento sin previo aviso. El contenido de este manual se proporciona en las condiciones en las que se fabrica el producto y, salvo que la ley aplicable exija lo contrario, no se ofrece ninguna garantía de ningún tipo, expresa o implícita, en cuanto a la exactitud, fiabilidad y contenido del documento.

Algunas funciones de este producto son proporcionadas por terceros. Este manual contiene información importante, consérvelo para su uso futuro.

Cualquier equipo transmisor de radio (incluido este producto) puede causar interferencias en la función de un equipo médico mal protegido. Cuando este prohibido el uso de las funciones de transmisión inalámbrica de equipos electrónicos, se deben seguir las regulaciones.

Marcapasos, desfibriladores cardioversores implantados: Al encender

2. Precauciones

Antes de usar este producto, explique cuidadosamente y siga las instrucciones y advertencias a continuación. La empresa no se hace responsable de las consecuencias causadas por un uso incorrecto o el incumplimiento de las instrucciones pertinentes de este producto.

Precauciones para los lugares de uso y el entorno operativo

Cualquier equipo transmisor de radio (incluido este producto) puede causar interferencias en la función de un equipo médico mal protegido. Cuando este prohibido el uso de las funciones de transmisión inalámbrica de equipos electrónicos, se deben seguir las regulaciones.

Marcapasos, desfibriladores cardioversores implantados: Al encender

producto descrita en el documento sin previo aviso. El contenido de este manual se proporciona en las condiciones en las que se fabrica el producto y, salvo que la ley aplicable exija lo contrario, no se ofrece ninguna garantía de ningún tipo, expresa o implícita, en cuanto a la exactitud, fiabilidad y contenido del documento.

Algunas funciones de este producto son proporcionadas por terceros. Este manual contiene información importante, consérvelo para su uso futuro.

Cualquier equipo transmisor de radio (incluido este producto) puede causar interferencias en la función de un equipo médico mal protegido. Cuando este prohibido el uso de las funciones de transmisión inalámbrica de equipos electrónicos, se deben seguir las regulaciones.

Marcapasos, desfibriladores cardioversores implantados: Al encender

el reloj, mantenga siempre la distancia entre el reloj y el dispositivo más de 6 pulgadas (unos 15,5 cm). No guarde el reloj en el bolsillo de su abrigo. Utilice el reloj situado en el otro lado del instrumento para reducir las posibles interferencias. Si sospecha de interferencias, apague el reloj inmediatamente.

Audífonos, implantes cocleares: Ciertos dispositivos inalámbricos digitales pueden causar interferencias con ciertos audífonos o implantes cocleares. Si se produce dicha interferencia, póngase en contacto con el fabricante para obtener una solución.

Otros equipos médicos: Si usted y las personas que lo rodean utilizan otros equipos médicos, consulte a los fabricantes de estos equipos para asegurarse de que puedan proteger adecuadamente las señales de radiofrecuencia circundantes. También puede pedirle información a su médico.

tarifa de tráfico generada por el uso de la tarjeta SIM

Instrucciones de uso

Cuando use el reloj, ajuste la tensión de la correa. No debe estar demasiado apretado para permitir que la piel respire. No debe estar demasiado suelto para evitar que el reloj se caiga o se dañe.

Trate de evitar tirar de la cadena del reloj o usarlo en la ducha, de lo contrario, el reloj podría dañarse.

Si el sonido se vuelve más débil después de que el reloj se empaque en agua, arroje el agua por el orificio del altavoz y el sonido volverá a la normalidad.

Si necesita reemplazar la correa del reloj, diríjase al punto de venta habitual para comprarla.

Evite someter el reloj a cambios bruscos de temperatura (como soplar

de calefacción o equipos de alto voltaje (como hornos microondas, hornos, radiadores, calentadores eléctricos, etc.) de lo contrario, puede causar accidentes como daños en el circuito, incendio y explosión.

No utilice este producto en condiciones de tormentas eléctricas.

No someta este producto y sus accesorios a fuertes impactos o vibraciones, para no dañar el producto.

No utilice el altavoz del reloj cerca de la oreja, ya que puede causar daños auditivos debido al volumen excesivo.

Si necesita reemplazar piezas del reloj (como correas, asas, hebillas, etc.), hágalo manejar por un adulto. Los niños están estrictamente prohibidos tocar las piezas, para evitar que los niños trague piezas pequeñas y causen asfixia u otras situaciones peligrosas.

de calefacción o equipos de alto voltaje (como hornos microondas, hornos, radiadores, calentadores eléctricos, etc.) de lo contrario, puede causar accidentes como daños en el circuito, incendio y explosión.

No utilice este producto en condiciones de tormentas eléctricas.

No someta este producto y sus accesorios a fuertes impactos o vibraciones, para no dañar el producto.

No utilice el altavoz del reloj cerca de la oreja, ya que puede causar daños auditivos debido al volumen excesivo.

Si necesita reemplazar piezas del reloj (como correas, asas, hebillas, etc.), hágalo manejar por un adulto. Los niños están estrictamente prohibidos tocar las piezas, para evitar que los niños trague piezas pequeñas y causen asfixia u otras situaciones peligrosas.

de calefacción o equipos de alto voltaje (como hornos microondas, hornos, radiadores, calentadores eléctricos, etc.) de lo contrario, puede causar accidentes como daños en el circuito, incendio y explosión.

No utilice este producto en condiciones de tormentas eléctricas.

No someta este producto y sus accesorios a fuertes impactos o vibraciones, para no dañar el producto.

No utilice el altavoz del reloj cerca de la oreja, ya que puede causar daños auditivos debido al volumen excesivo.

Si necesita reemplazar piezas del reloj (como correas, asas, hebillas, etc.), hágalo manejar por un adulto. Los niños están estrictamente prohibidos tocar las piezas, para evitar que los niños trague piezas pequeñas y causen asfixia u otras situaciones peligrosas.

Utilice las piezas correctamente de acuerdo con las instrucciones y no las utilice para otros fines.

Al usar aplicaciones que consumen mucha energía o usar ciertas aplicaciones en el dispositivo durante mucho tiempo, si toca el dispositivo y siente calor, esto es normal y no afectará el rendimiento o la vida útil del dispositivo. Si el dispositivo se siente más caliente, retírelo hasta que se enfíe. El contacto prolongado de la piel con equipos demasiado calientes puede causar quemaduras a baja temperatura, y aparecerán manchas rojas y pigmentación en la piel en el sitio de contacto.

Precauciones para el mantenimiento y mantenimiento

Los no profesionales no pueden desmontar el reloj y otros accesorios por sí mismos. Cuando el reloj y los accesorios funcionen mal, comuníquese con su centro de servicio postventa local.

No utilice disolventes químicos ni detergentes para limpiar este producto.

Evite dejar caer, golpear o hacer vibrar el reloj. El manejo brusco del reloj hará que la pantalla se rompa y dañe la placa de circuito interno y la estructura de precisión.

En caso de fenómenos anormales durante el uso, mantenga presionado el botón de encendido hasta que se encienda el reloj, lo que puede resolver fallas generales.

Para prolongar la vida útil de la batería, mantenga la batería completamente cargada. Si la batería cargada no se utiliza durante mucho tiempo, la batería se descargará gradualmente por sí sola. Cuando no esté en uso, coloque el reloj en un lugar fresco, seco y oscuro después de cargarlo.

La limpieza de la correa no es una característica constante, y la limpieza está relacionada con el entorno y los hábitos de uso del usuario. Está en contacto directo con la piel cuando se usa y debe mantenerse limpio. Cuando la correa está manchada de sudor, polvo, etc., límpiela con un paño suave limpio y seco.

Si los contactos de carga están sucios, utilice un paño suave y seco para limpiarlos y los no raye con objetos metálicos duros.

Cuando la correa del reloj es vieja y está agrietada, debe reemplazarse por una nueva.

Antes de limpiar el reloj, apáguelo.

No limpie el reloj mientras se carga.

No utilice calor, como un secador de pelo, para mantener el reloj seco.

注意事项



**Kids Smartwatch WI SE
FCC Interference Statement**

FCC ID:2AQRM-WISE

Foxx Development Inc.
3480 Preston Ridge Rd Suite500, Alpharetta, GA 30005

**Federal Communication Commis-
sion Interference Statement**

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves.
This device is designed and manufactured not to exceed the

emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the US Government. The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR.
This device should be considered in two cases, one is used in front to face, the limit of 1.6W/Kg, and the other is worn on the wrist, the limit of 4.0W/Kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. The highest SAR value for the model device as reported to the FCC when tested is **head sar**

0.655W/Kg and **hand sar** 1.631W/Kg as described in this user guide. While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.
The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid.
For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and be positioned a minimum of 10mm from the **head and 0mm** from the **hand**.
Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

15.19 (a)(3)
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, including interference that may cause undesired operation.

15.21
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 (b)
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WEEE



This device must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE - 2002/96/EC). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.



**Reloj inteligente para niños WI SE
Declaración de interferencia FCC**

FCC ID:2AQRM-WISE

Foxx Desarrollo Inc.
3480 Preston Ridge Rd Suite500, Alpharetta, GA 30005

**Declaración de interferencia de la
Comisión Federal de Comunica-
ciones**

Información de exposición a RF

Este dispositivo cumple con los requisitos del gobierno para la exposición a las ondas de radio.
Este dispositivo está diseñado y fabricado para no exceder los límites de emisión para la exposición a la energía de radiofrecuencia (RF) establecidos por la Comisión Federal de Comunicaciones del Gobierno de los EE. UU.
El estándar de exposición para dispositivos inalámbricos emplea una unidad de medida conocida como Tasa de Absorción Específica, o SAR.
Este dispositivo debe considerarse en dos casos, uno se usa de frente a frente, el límite de 1.6 W/Kg, y el otro se usa en la muñeca, el límite de 4.0 W/Kg. Las pruebas de SAR se realizan utilizando posiciones de funcionamiento estándar aceptadas por la FCC con el dispositivo transmitiendo a su nivel de potencia certificado más alto, el nivel de SAR real del dispositivo mientras está en funciona-

miento puede estar muy por debajo del valor máximo. Esto se debe a que el dispositivo está diseñado para funcionar a múltiples niveles de potencia para utilizar solo la energía necesaria para llegar a la red. En general, cuanto más cerca esté de una antena de estación base inalámbrica, menor será la potencia de salida. El valor SAR más alto para el modelo de dispositivo, según lo informado a la FCC cuando se probó, **es de cabeza 0.655 W/kg y sar de mano 1.631W/Kg** en la muñeca, como se describe en esta guía del usuario. Si bien puede haber diferencias entre los niveles de SAR de varios dispositivos y en varias posiciones, todos cumplen con los requisitos del gobierno.
La FCC ha otorgado una autorización de equipo para este modelo de dispositivo con todos los niveles de SAR informados evaluados de acuerdo con las pautas de exposición a RF de la FCC. La información SAR de este modelo de dispositivo se encuentra en

los archivos de la FCC y se puede encontrar en la sección Display Grant de www.fcc.gov/oet/ea/fccid.

Para el uso en el cuerpo, este dispositivo ha sido probado y cumple con las pautas de exposición a RF de la FCC para su uso con un accesorio que no contenga metal y se coloque a un mínimo de 10 mm de la cabeza y 0 mm del mano.

Es posible que el uso de otros accesorios no garantice el cumplimiento de las pautas de exposición a RF de la FCC.

15.19 (a)(3)
Este dispositivo cumple con la parte 15 de las Reglas de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas en las comunicaciones por radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias dañinas en la recepción de radio

15.21
Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para operar el equipo.

15.105 (b)
Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de conformidad con la parte 15 de las Reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas en las comunicaciones por radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias dañinas en la recepción de radio

o televisión, lo cual se puede determinar apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado en radio/TV para obtener ayuda.

RAEE



Este dispositivo no debe desecharse como residuo doméstico normal, de acuerdo con la directiva de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE - 2002/96/CE). En su lugar, debe eliminarse devolviéndolo al punto de venta o a un punto de recogida de reciclaje municipal.